



Tool Station Info & Setup

PN 6460165
Made in Taiwan
Specifications subject to
change without notice.

Pedro's NA
P.O. Box 320635
Boston, MA 02132, USA
Tel: +1 978 657 7101

Svenska filialen till Sports
adVentures Intl. SA, Schweiz
Västra Granholmen,
185 99 Vaxholm, Sweden
Tel: +46 8 559 269 08

In The Box:

- 1 x Tool Station Panel
- 1 x Burrito Tool Wrap
- 13 x Pedro's Tools, cabled to panel (see list)
- 2 x Spare Chain Tool Screw/Pin
- 2 x M6 Flathead Screws
- 3 x Spare Cable and Crimp Sets

Other Supplies You Will Need:

- 2 People
- Mounting hardware (not included, see notes)
- Pencil or Marker to mark hole locations
- Drill and bits for pilot hole and hardware
- Tape Measure and Level
- 4mm Hex Wrench
- Cable crimp tool or pliers (not required)

Choosing Mounting Hardware:

- Due to the many possible mounting surfaces, mounting hardware is not included.
- Mounting holes are keyhole shaped to allow removal and reinstallation if desired. Take note of hole dimensions when choosing hardware.
- Choose hardware rated to hold at least 25 pounds.
- Central mounting holes are spaced to fit standard steel sign posts if a free-standing setup is preferred.

References:

Bill of Materials


Part #	Product Name	Qty
6460300	6-Pack Chain Tool	1
6460300-1	2 Spare 6-Pack Pin/Screw Assemblies	1
6463110	Folding Hex Set - 1.5,2,2.5,3,4,5,6mm,T25	1
6463115	Folding Hex/Torx Set-3,4,5,6,T10,T25,T30	1
6458015	Pro T/L Hex Wrench - 8mm	1
6400050	Tire Levers - Yellow Pair	1
6463000	Pro Pedal Wrench	1
6464102	#2 Phillips Screwdriver	1
6464255	5.5mm Flat Blade Screwdriver	1
6400520	Toothbrush	1
6460700	Chain Checker Plus	1
6460530	Adjustable Wrench-10"	1
6460307	Trixie - 8, 9, 10, 15mm Box, Bottle, Cog Lockring	1
6450695	Burrito Tool Wrap	1
6460165-1	Back Panel	1
6460165-2	M6 X 1 Flathead Screws, 8mm Length	2
6460165-3	Cable and Crimp Set	16

Feedback and Tool Replacement


Please send feedback to feedback@pedros.com.

Please note that due to the intended usage of the tool station, tool replacement under our standard warranty may not apply.

Panel Dimensions

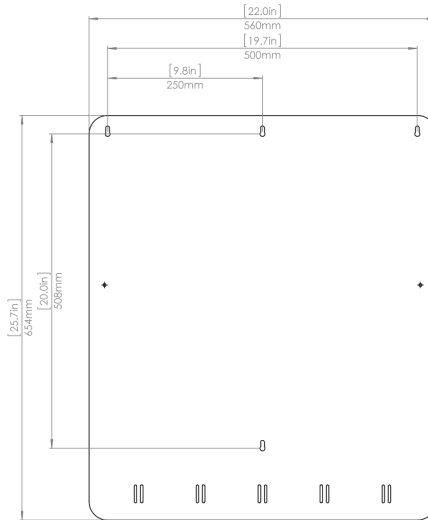

Mounting Hole Detail

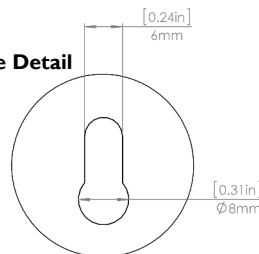

- 1 Place Burrito on ground and position panel with top edge approximately 6 feet from the ground. Mark hole locations.
- 2 Place back panel aside and drill holes. If head of chosen fastener fits through the larger portion of the keyhole, install fastener. Leave space under head for panel.
- 3 Mount the panel onto the wall. If fasteners were not installed in the previous step, install now. For permanent installation, ensure fastener is snug against panel.
- 4 Unfold Burrito Tool Wrap and locate grommets underneath the protective flap. Mount the Burrito to the back panel through the grommets using the two supplied M6 Flathead Screws and a 4mm hex wrench. If Burrito straps are present, they can be tucked behind tool wrap to conceal.
- 5 Remove twist-ties from cables and ensure all hang straight and do not tangle.

Additional Notes:

During heavy station usage in fair weather, the protective flap can be folded up and tucked behind the wrap for easier access to the tools.

Extra cable and crimp sets are included. These can be used to add extra tools or a floor pump and also to facilitate replacement of tools if necessary.

Occasional cleaning and oiling of tool surfaces will help prevent rusting in wetter climates. Check condition of tools often to ensure proper function and happy customers!

